

#14-742 PRESSURE WASHER – ELECTRIC

OPERATING INSTRUCTIONS:

When operating your high pressure cleaner pay attention that machine is in a horizontal position.

1. Connect the high pressure hose with spray gun and machine.
2. Connect to suitable water supply.
3. Flush the air from the pump (open and close the spray gun several times.)
4. Make the electrical connection.
5. Switch on the machine with opened spray gun and begin cleaning.
6. After completing work, completely empty the pump (switch the motor on for approximately 20 seconds without the suction and pressure hoses).

Warnings:

Danger: Risk of injection causing severe injury.

- Keep clear of nozzle! Never place hand or fingers in front of nozzle
- Do not direct discharge stream at people or pets!
- Be certain the nozzle is securely connected to the wand to prevent accidental discharge.

Caution: Risk of Damage

- Do not allow spray pattern to remain on a fixed area for an extended period of time. Possible damage may occur to the area.

Warning: Risk of severe injury!

- The trigger gun should always be locked in the off position when not in use!