

## #46-460-01 SNO KONE

Bliz Whiz

### **INSTALLATION:**

**Machine Description:** The Bliz Whiz is a compact automatic shaver with a tremendous capacity. You will find that it keeps up with the demand; as soon as you put ice into the hopper, it is shaved into fine snow.

**Electrical Requirements:** The Bliz Whiz operates on 120 volt, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

**Ice Requirements:** The Bliz Whiz can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size. Note: The ice will not enter the shaving chute if the pieces are too large. The design of the shaving chute automatically draws the ice against the blades. There is no need for manual effort.

### **OPERATING INSTRUCTIONS:**

**Machine Operation:** At the base of the machine are switches marked MOTOR and LIGHT.

**TO LIGHT THE DISPLAY AREA:** Flip the switch marked LIGHT. You should leave the light on during your operating time. Return the switch to the 'OFF' position to turn the light off.

**TO SHAVE ICE:** Flip the switch marked MOTOR. You may begin to place ice into the hopper. When you are finished shaving, return switch to the 'OFF' position.

**Operating Hints:** You can really make a lot of ice in a short time with the Bliz Whiz, but don't let the ice pile up and block the discharge chute. This will jam the machine. If this situation were to happen:

1. Turn the MOTOR switch to the OFF position.
2. Clear the ice out of the machine with a piece of wood.
3. Allow the remainder of the ice in the machine to melt.
4. The Bliz Whiz should now be ready for operation.

Note: never allow any foreign or metallic objects around the shaver area. Blades are often damaged by ice picks and scoops, and debris that may be in the ice.