



Quick Use Guide

The Mini-Vox is a battery-operated handheld P.A. system that's easy to set-up and operate. Before using the Mini-Vox, you must first install nine (9) C-size batteries as described below. *If your unit is equipped with an RC-25 rechargeable battery kit, you must charge the batteries completely before use (see page 7).*


Additional operating details can be found on page 6-7.

Basic Operating Instructions

1. Direct the Mini-Vox toward the audience.
2. Plug the microphone cable into the MIC INPUT jack (1/4"-phone).
3. Turn the Mini-Vox power/volume control ON (*the red LED should begin blinking*). Then turn the microphone switch ON.
4. Hold the microphone close to your mouth (1-2") and speak while adjusting volume to desired level.

Battery Installation

1. Turn the slotted fastener located on bottom of the Mini-Vox 1/4-turn counter clockwise (use a coin or flat screwdriver) and remove the battery cover.
2. Insert three size C batteries (alkaline-type work best) into each cardboard battery-holder as shown.

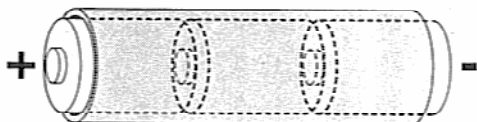

3. Position the three battery tubes into the battery compartment with negative (flat) end contacting the springs (as shown on label).
4. Fit the bent tab on the battery cover into the slot at back of the battery compartment, close cover, then lock fastener by turning 1/4-turn clockwise.

To avoid feedback, do not position the microphone in front of the speaker.

For extended service life and greater output, use alkaline batteries.